

# modular link coupling system

with Tenpu® fiber technology



# **TENBEX-ECO SERIES**

The SGF TENBEX-ECO coupling system are torsional-elastic, non-shiftable coupling units that can be used in a wide range of torque transmission applications. They provide effective damping of vibration and torque peaks as well as efficient compensation for radial, axial

and angular misalignment.

TENBEX-ECO coupling systems utilise a series of strong and durable SGF link elements that are engineered to handle the most rigorous rotational power transmission requirements. Individual SGF link elements are manufactured with extremely strong reinforcement cord inlays (Tenpu fibre technology) and special high grade rubber compounds.

Utilising the SGF tension-force principle, torque is transferred almost exclusively by the vulcanised Tenpu cord reinforcement inlays. The rubber supports and protects the cord inlays whilst effectively dampening noise and vibration during operation.


The modular design of the TENBEX-ECO link coupling system is available for two types of application connections. Type F for a direct connection to an combustion engine, and Type D for a shaft to shaft connection. The coupling can be combined with optional hubs, spacer and adapter flanges to provide complete fitment versatility without extensive modifications or further engineering to the equipment.

Further, each coupling has the flexibility of been easily upgraded or downgraded (within its size limit) to suit the different torque requirements by simply changing to different torque and stiffness rated link elements.

The high power density ratio of the link elements and their strong, durable and resilient construction are one of the reasons why the SCF TENBEX-ECO coupling system is the best choice for many arduous Industrial, Marine and Transport applications. It is also an ideal solution for Heavy Machinery such as rock crushers, screw conveyors and milling machines.

All metal parts of the coupling system are protected against corrosion by galvanic coating. This ensures excellent protection from aggressive media or harsh environmental influences during operation.

TENBEX-ECO flanges and SGF link elements are connected with a simple screw connection, using high tensile (grade 10.9) bolts and washers (300 HV). This direct connection to the flanges makes installation and replacement quick and easy.

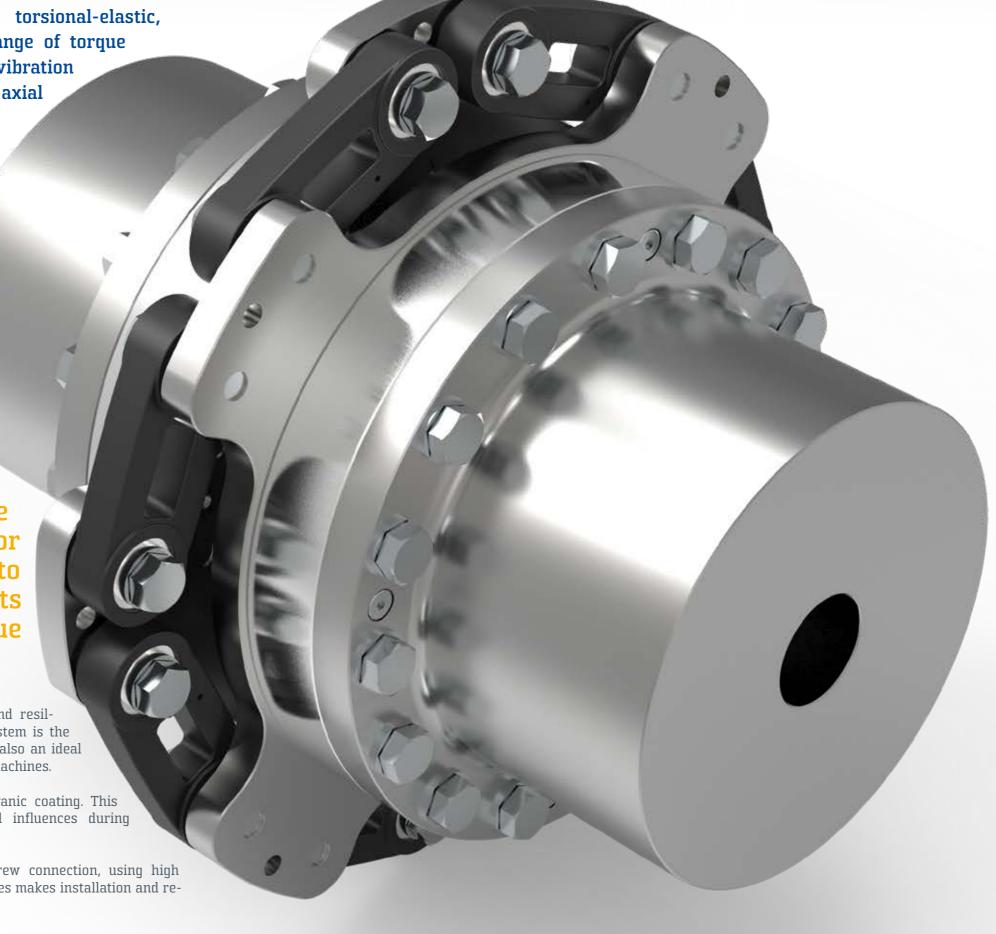









# APPLICATIONS, PROPERTIES, BENEFITS

### **Properties**

- Compensation of radial, axial and angular misalignments
- » Damping of torque peaks and vibration in the power train
- » Robust and simple construction by use of link elements with Tenpu® fiber technology
- » Corrosion resistant due to galvanic coated metal components

### **Benefits**

- » Quick and easy maintenance without removing the drive or driven components
- » Individual adaptations to unique application requirements are easily and economically possible
- » High torque transmission and small installation space
- » Achieve different stiffness properties of the TENBEX-ECO system (soft/middle/hard) within the same installation space
- » Resistant to shock loads

### **Common Applications**

- » Damping of torque peaks between power unit and generator
- » Damping of vibration in the drive shaft e.g. in material handling or in test benches
- » For connecting combustion engines and generators, including any related drive equipment in power plants and power stations
- » As a flexible connecting element in mixers, pumps and argricultural machinery
- For connection between gears and drive shaft in marine applications, e.g. ship propulsion

You can find videos to our application solutions on our **Youtube Kanal** 





# TENBEX-ECO




# SCE SINGLE STATE OF THE STATE O

# TENBEX-ECO-F

for flywheel-shaftconnections

TENBEX-ECO-F couplings are designed to connect a combustion engine with a drive shaft of a system like a gear box, a generator or a hydraulic pump. A connection to different flywheel sizes is possible, depending on the dimension of the coupling. Optionally available spacer flanges and adapter flanges enable the coupling can be installed and removed without moving any parts of the machinery.

### Available add-ons

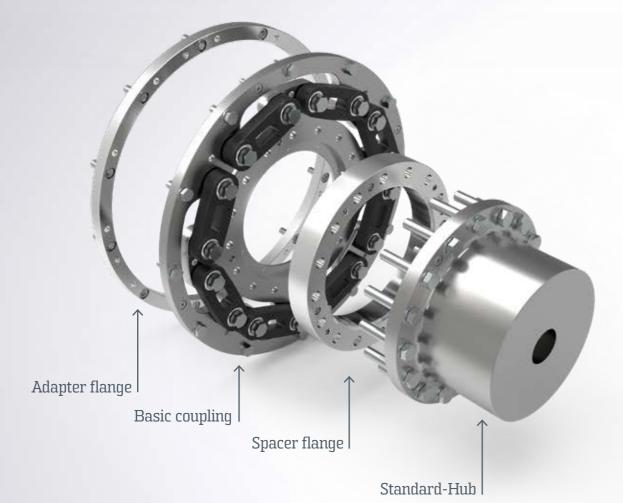


# TENBEX-ECO-D

for shaft-shaft-connections

TENBEX-ECO-D couplings are designed for connecting two shafts of a drivetrain. The connecting geometry is standardized, but can be adapted to customers requirements if necessary. For special requirements, please contact our experts: Industry@sqf.com.

### Available add-ons

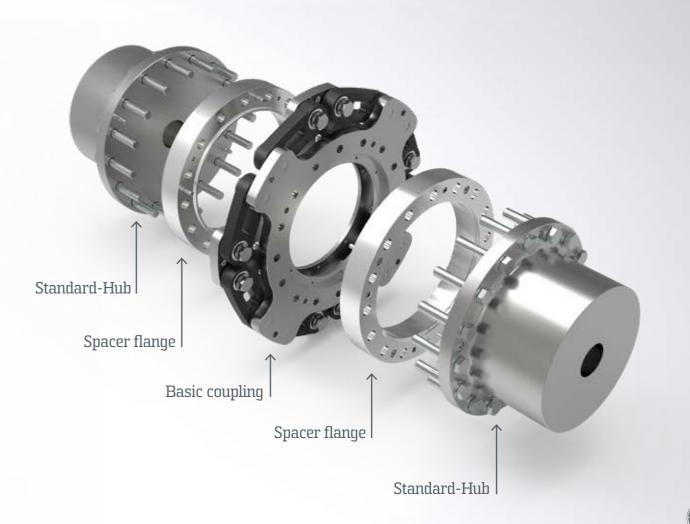



# NOMINAL TORQUE OF LINK COUPLINGS

For choosing the right coupling size, you have to calculate the nominal torque  $T_{\scriptscriptstyle N}$  of your system:


$$T_{N} = \frac{9550 \times P [kW]}{n [rpm]}$$
$$T_{KN} \ge T_{N}$$

$T_{N}$	Nominal torque of the system	Nm
$T_{KN}$	Max permissible nominal torque of flexible coupling	Nm
P	Power	kW
n	Speed	rpm

### Be careful with the following aspects:


- » In addition to static loads, the dynamic characteristics of the drive train should be considered as well in order to avoid resonance activity. Resonance activity can damage parts of the machinery within a few minutes of operation and must be avoided.
- » Required data for a torsional vibration calculation can be taken from the drawings and the technical sheets of the couplings. An explanation of the technical data can be found in the document SGF-TL-OOI (available on request or on www.sgf.com).

» In case of oscillating loads, please consider the maximum power loss  $P_{KW}$  of the coupling system.

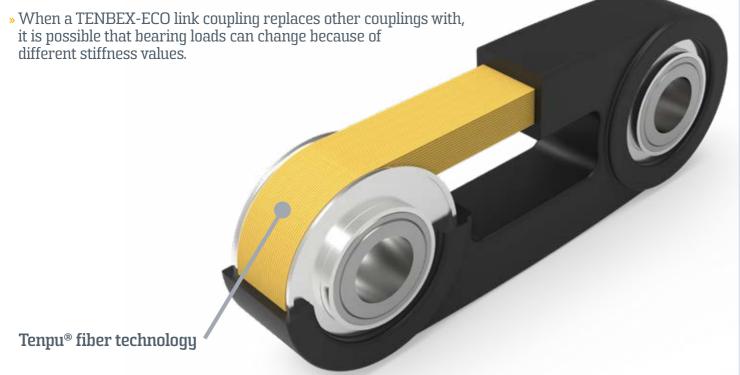





### NOMINAL TORQUE OF TENBEX-ECO-COUPLINGS

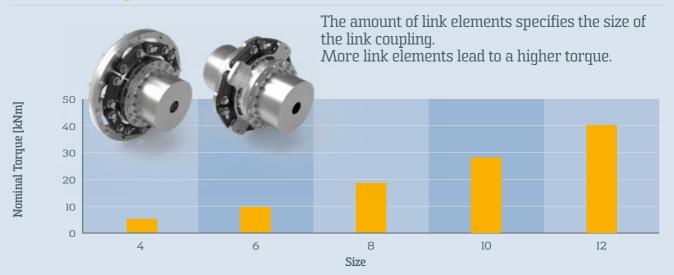

### POSSIBLE INNER DIAMETER OF HUBS

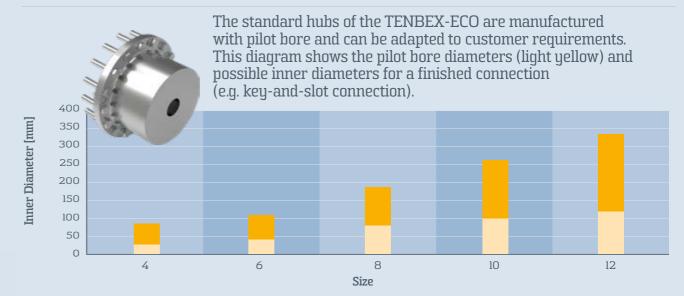

### FLYWHEEL SIZE FOR TENBEX-ECO-F-SERIES

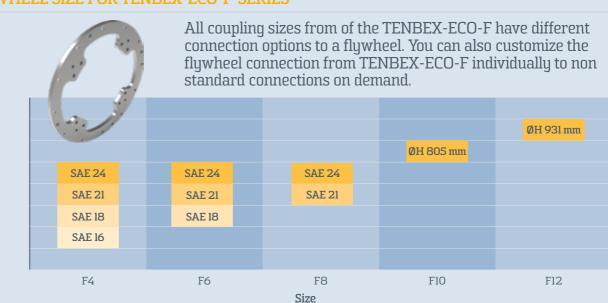






## **TECHNICAL DATA - BASIC COUPLING**

**TENBEX-ECO-F** 

for flywheel-shaftconnection



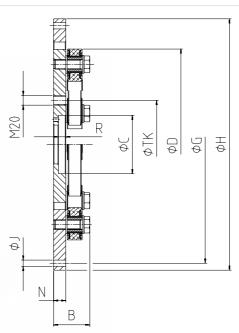

		ı	Power	data					(	Geometry of	data							
Size	T <sub>KN</sub> *	T <sub>KW</sub> *	T <sub>KMAX1</sub> *	C <sub>Tdyn</sub> **	n <sub>MAX</sub>	Flywheel	ØG	ØН	ØJ	number holes	ØO	В	N	ØTK	ØС	R	Order num	ber
	[kNm]	[kNm]	[kNm]	[kNm/rad]	[rpm]	Size	[mm]	[mm]	[mm]	110103	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	Description	Part number
						SAE 16	488,95	517,50	13	8							TENBEX-ECO-F4-1	GK-10188-Z1
	F 0	4.7	7.0	620	2 200	SAE 18	542,92	571,50	17	6	405	747	25	100	120 <sup>H7</sup>	102	TENBEX-ECO-F4-1	GK-10177-Z1
	5,2	1,7	7,0	630	2.800	SAE 21	641,35	673,10	17	12	405	74,7	25	182	120**	102	TENBEX-ECO-F4-1	GK-10178-Z1
						SAE 24	692,15	733,42	21	12							TENBEX-ECO-F4-1	GK-10179-Z1
						SAE 16	488,95	517,50	13	8							TENBEX-ECO-F4-1	GK-10188-Z2
F4	4.8	1,6	6.4	260	2.800	SAE 18	542,92	571,50	17	6	405	74.7	25	182	2 120 <sup>H7</sup>	102	TENBEX-ECO-F4-1	GK-10177-Z2
F4	4,0	1,0	0,4	200	2.000	SAE 21	641,35	673,10	17	12	405	74,7	25	102		102	TENBEX-ECO-F4-1	GK-10178-Z2
						SAE 24	692,15	733,42	21	12							TENBEX-ECO-F4-1	GK-10179-Z2
						SAE 16	488,95	517,50	13	8							TENBEX-ECO-F4-1	GK-10188-Z3
	- E	1,8	7,3	370	2.800	SAE 18	542,92	571,50	17	6	405	747	25	100	120 <sup>H7</sup>	102	TENBEX-ECO-F4-1	GK-10177-Z3
	5,5	1,0	7,3	370	2.000	SAE 21	641,35	673,10	17	12	405	74,7	25	182	120	102	TENBEX-ECO-F4-1	GK-10178-Z3
						SAE 24	692,15	733,42	21	12							TENBEX-ECO-F4-1	GK-10179-Z3
						SAE 18	542,92	571,50	17	6					180 <sup>H7</sup>		TENBEX-ECO-F6-1	GK-10189-Z1
	9,4	3,1	12,0	1.300	2.600	SAE 21	641,35	673,10	17	12	460 74,	74,7	25	237		160	TENBEX-ECO-F6-1	GK-10181-Z1
						SAE 24	692,15	733,42	21	12							TENBEX-ECO-F6-1	GK-10182-Z1
						SAE 18	542,92	571,50	17	6							TENBEX-ECO-F6-1	GK-10189-Z2
F6	8,6	2,8	11,0	560	2.600	SAE 21	641,35	673,10	17	12	460	460 74,7	25	237	180 <sup>H7</sup>	160	TENBEX-ECO-F6-1	GK-10181-Z2
						SAE 24	692,15	733,42	21	12							TENBEX-ECO-F6-1	GK-10182-Z2
						SAE 18	542,92	571,50	17	6							TENBEX-ECO-F6-1	GK-10189-Z3
	9,8	3,2	13,0	800	2.600	SAE 21	641,35	673,10	17	12	460	74,7	25	237	180 <sup>H7</sup>	160	TENBEX-ECO-F6-1	GK-10181-Z3
						SAE 24	692,15	733,42	21	12							TENBEX-ECO-F6-1	GK-10182-Z3
	17,0	5,6	22,0	3.300	2.300	SAE 21	641,35	673,10	17	12	585	74,7	25	362	310 <sup>H7</sup>	285	TENBEX-ECO-F8-1	GK-10190-Z1
	17,0	5,0	22,0	3.300	2.500	SAE 24	692,15	733,42	21	12	303	14,1	20	302	310	200	TENBEX-ECO-F8-1	GK-10183-Z1
F8	15.0	5.2	20.0	1.300	2.300	SAE 21	641,35	673,10	17	12	585	74.7	25	362	310 <sup>H7</sup>	285	TENBEX-ECO-F8-1	GK-10190-Z2
10	13,0	5,2	20,0	1.500	2.500	SAE 24	692,15	733,42	21	12	303	7-7,7	20	302	310	200	TENBEX-ECO-F8-1	GK-10183-Z2
	17,0	5,9	23,0	1.900	2.300	SAE 21	641,35	673,10	17	12	585	74,7	25	362	310 <sup>H7</sup>	285	TENBEX-ECO-F8-1	GK-10190-Z3
	17,0	5,5	20,0	1.500	2.500	SAE 24	692,15	733,42	21	12	303	7-4,7	20	302	310	200	TENBEX-ECO-F8-1	GK-10183-Z3
	26,0	8,9	35,0	6.600	2.100	-	766,00	805,00	21	12	710	74,7	25	487	430 <sup>H7</sup>	408	TENBEX-ECO-F10-1	GK-10184-Z1
F10	24,0	8,2	33,0	2.700	2.100	-	766,00	805,00	21	12	710	74,7	25	487	430 <sup>H7</sup>	408	TENBEX-ECO-F10-1	GK-10184-Z2
	28,0	9,3	37,0	3.900	2.100	-	766,00	805,00	21	12	710	74,7	25	487	430 <sup>H7</sup>	408	TENBEX-ECO-F10-1	GK-10184-Z3
	38,0	12,0	51,0	11.500	1.900	-	891,00	931,00	21	20	835	74,7	25	612	555 <sup>H7</sup>	532	TENBEX-ECO-F12-1	GK-10185-Z1
F12	35,0	11,0	47,0	4.700	1.900	-	891,00	931,00	21	20	835	74,7	25	612	555 <sup>H7</sup>	532	TENBEX-ECO-F12-1	GK-10185-Z2
	40,0	13,0	53,0	6.700	1.900	-	891,00	931,00	21	20	835	74,7	25	612	555 <sup>H7</sup>	532	TENBEX-ECO-F12-1	GK-10185-Z3


### \* nominal torque, for more informations to technical data see SGF-TL-001, \*\* theoretical/calculated values, deviations possible

## **TECHNICAL DATA - BASIC COUPLING**

TENBEX-ECO-D

for shaft-shaftconnection



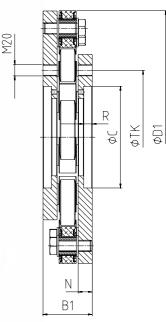

0:			Power data	a				Geome		Order number			
Size	T <sub>KN</sub> *	T <sub>KW</sub> *	T <sub>KMAX1</sub> *	C <sub>Tdyn</sub> **	n <sub>MAX</sub>	ØD1	B1	N	ØTK	ØС	R	Order nui	nber
	[kNm]	[kNm]	[kNm]	[kNm/rad]	[rpm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	Description	Part number
	5,2	1,7	7,0	630	2.800	392	87,2	25	182	120 H7	15	TENBEX-ECO-D4-1	GK10197-Z1
D4	4,8	1,6	6,4	260	2.800	392	87,2	25	182	120 H7	15	TENBEX-ECO-D4-1	GK10197-Z2
	5,5	1,8	7,3	370	2.800	392	87,2	25	182	120 H7	15	TENBEX-ECO-D4-1	GK10197-Z3
	9,4	3,1	12,0	1.300	2.600	447	87,2	25	237	180 H7	15	TENBEX-ECO-D6-1	GK-10191-Z1
D6	8,6	2,8	11,0	560	2.600	447	87,2	25	237	180 H7	15	TENBEX-ECO-D6-1	GK-10191-Z2
	9,8	3,2	13,0	800	2.600	447	87,2	25	237	180 H7	15	TENBEX-ECO-D6-1	GK-10191-Z3
	17,0	5,6	22,0	3.300	2.300	572	87,2	25	362	310 H7	15	TENBEX-ECO-D8-1	GK-10192-Z1
D8	15,0	5,2	20,0	1.300	2.300	572	87,2	25	362	310 H7	15	TENBEX-ECO-D8-1	GK-10192-Z2
	17,0	5,9	23,0	1.900	2.300	572	87,2	25	362	310 H7	15	TENBEX-ECO-D8-1	GK-10192-Z3
	26,0	8,9	35,0	6.600	2.100	697	87,2	25	487	430 H7	15	TENBEX-ECO-D10-1	GK-10186-Z1
D10	24,0	8,2	33,0	2.700	2.100	697	87,2	25	487	430 H7	15	TENBEX-ECO-D10-1	GK-10186-Z2
	28,0	9,3	37,0	3.900	2.100	697	87,2	25	487	430 H7	15	TENBEX-ECO-D10-1	GK-10186-Z3
	38,0	12,0	51,0	11.500	1.900	822	87,2	25	612	555 H7	15	TENBEX-ECO-D12-1	GK-10187-Z1
D12	35,0	11,0	47,0	4.700	1.900	822	87,2	25	612	555 H7	15	TENBEX-ECO-D12-1	GK-10187-Z2
	40,0	13,0	53,0	6.700	1.900	822	87,2	25	612	555 H7	15	TENBEX-ECO-D12-1	GK-10187-Z3

<sup>\*</sup> nominal torque, for more informations to technical data see SGF-TL-001, \*\* theoretical/calculated values, deviations possible

### Order example:

The coupling and the extensions must be ordered separately. Following an example for an order of TENBEX-ECO-D8-1 and the matching hubs.

	Amount	Description	Part number
Basic coupling	lx	TENBEX-ECO-D8-1	GK-10192-Z1
Hubs	2x	Hub - Set	BI-10012








## **TECHNICAL DATA - EXTENSIONS**

## **TECHNICAL DATA - EXTENSIONS**

### SPACER FLANGES


The spacer flanges are protected against corrosion by galvanic coating. Required screws are included.

-								
Size	ØTK	Ød4	Ød5	ØM	number of holes	Y	Order no	umber
	[mm]	[mm]	[mm]	[mm]		[mm]	Description	Part number
4	182	112	226	Ø22	8	53	Spacer flange - Set	BI-10015
6	237	170	278	Ø22	12	53	Spacer flange - Set	BI-10016
8	362	300	406	Ø22	16	53	Spacer flange - Set	BI-10017
10	487	420	531	Ø22	20	53	Spacer flange - Set	BI-10018
12	612	545	656	Ø22	24	53	Spacer flange - Set	BI-10019
		8	1/1	10				

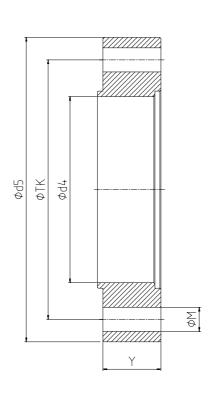

TENBEX-ECO hubs are available in standard sizes and are delivered with pilot bore. The hubs are protected against corrosion by a galvanic coating. Required screws are included.


Size	ØTK	Pilot	Ød Max***	Ød1	Ød2	L	W	ØM	numbers of holes	Order r	number
	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]		Description	Part number
4	182	29	80	130	226	100	25	22	8	Hub - Set	BI-10010
6	237	39	110	180	278	120	25	22	12	Hub - Set	BI-10011
8	362	69	185	300	406	200	30	22	16	Hub - Set	BI-10012
10	487	99	260	420	530	300	30	22	20	Hub - Set	BI-10013
12	612	119	335	540	656	340	30	22	24	Hub - Set	BI-10014
*** mc	*** maximum inner diameter for feather-key-connection										

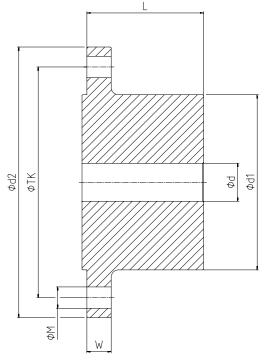

### ADAPTER FLANGES

The adapter flanges are protected against corrosion by galvanic coating. Required screws are included.

SAE	ØH	ØG	Ød6	Х	N1	ØJ	number holes	ØJ1	ØJ2	Order number	
	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]		[mm]	[mm]	Description	Part number
16	517,52	488,95	460	29	16,4	12	8	13	20	Adapter flange - Set	BI-10020
18	571,5	542,92	514	29	12,4	16	6	17	26	Adapter flange - Set	BI-10021
21	673,1	641,35	610	29	12,4	16	12	17	26	Adapter flange - Set	BI-10022
24	733,42	692,15	650	29	8,4	20	12	21	33	Adapter flange - Set	BI-10023
	special sizes on demand										

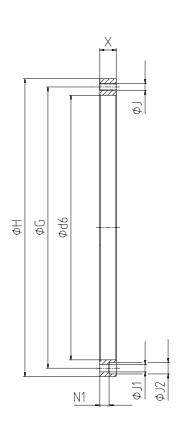

### BASIC COUPLING WITH STANDARD-HUBS













# Radial disassembly of the Basic Coupling


# TENBEX-ECO-F

### WITH SPACER- AND ADAPTER FLANGE

The TENBEX-ECO-F system can be expanded with one spacer flange and one adapter flange. The adapter flange is connected to the flywheel and the spacer flange is connected to the basic coupling. With these optional parts, the basic coupling can be installed and removed very quickly without moving the drivetrain units.

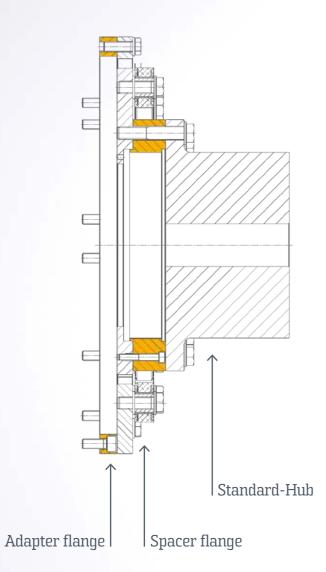

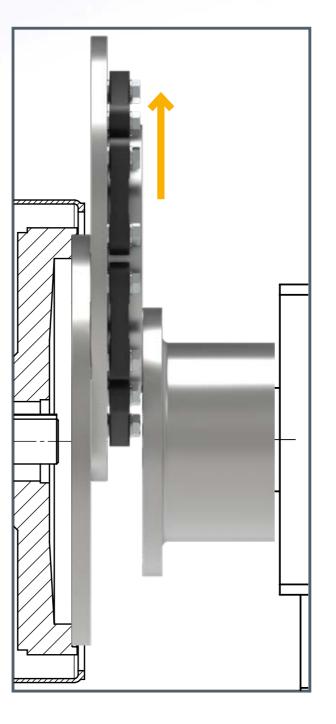

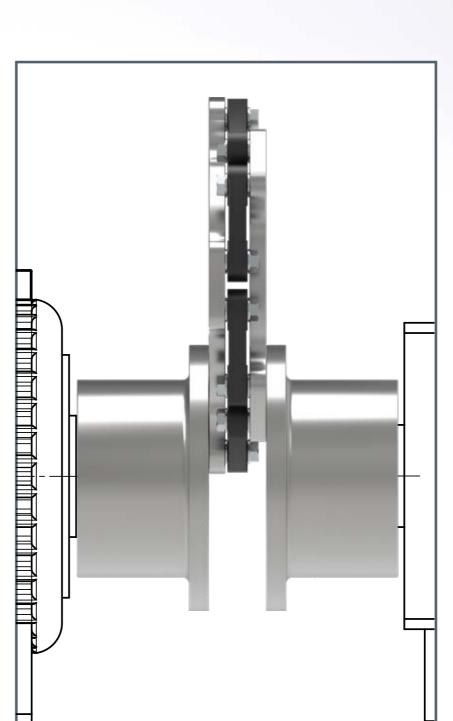

TENBEX-ECO-D

WITH HUB WITHOUT CENTERING COLLLAR

The TENBEX-ECO-D can be installed and removed without moving the drivetrain units.

For this feature, the hubs must be machined at the centering collar. In this case, the exact positioning of hub and basic coupling will be done by fitting screws.

### **FEATURES**

The TENBEX-ECO-D can be expanded by using at least with one spacer flange, in case the standard design of the coupling does not fit to the distance between the hubs. Spacer flanges with customized width are available on demand.






### TECHNICAL DATA

### Displacement

The TENBEX-ECO link coupling is able to compensate displacement between the drive shaft and the driven shaft, as described as follows. The specified maximum values apply, however, only to the specific aspect. In case displacement occurs in different directions simultaneously, reduced durability can be expected.

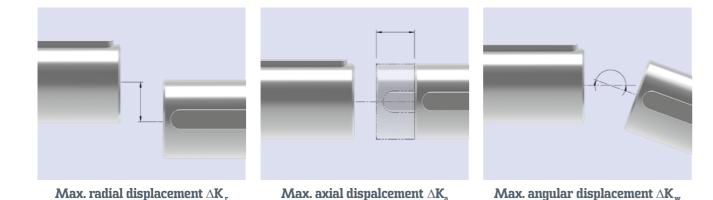


The maximum values below are mostly regardless to the size and depends on the stiffness of the link elements.

Stiffness	$\Delta K_r$	$\Delta \mathbf{K}_{a}$	$\Delta K_{w}$								
otimio33	ΔIX <sub>r</sub>	ΔINa	4-1	6-1	8-1	10-1	12-1				
	[mm]	[mm]	[°]	[°]	[°]	[°]	[°]				
soft - Z2	1,8	2,1	0,7	0,6	0,4	0,3	0,3				
medium - Z1	1,5	2,1	0,7	0,6	0,4	0,3	0,3				
hard - Z3	0,6	2,1	0,7	0,6	0,4	0,3	0,3				



### DESCRIPTION TECHNICAL DATA

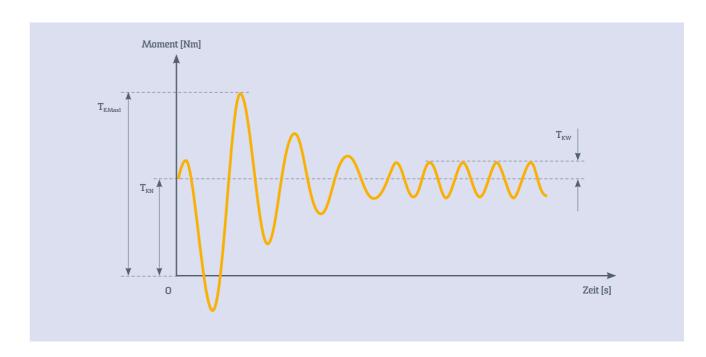

### Nominal torque $T_{\rm KN}$

 $T_{\mbox{\scriptsize KN}}$  is the nominal torque of the flexible coupling. This torque can be permanently transferred in full by the flexible coupling.

### Maximum torque T<sub>KMaxl</sub>

Torques at values of  $T_{\text{KMaxl}}$  occur regularly in the normal operation of a machine or plant and can be transferred by the flexible coupling without damage as long as the load develops for a short time only and with a frequency not greater than 50,000 load cycles.

Torque peaks at the value of  $T_{\text{KMaxl}}$  typically occur when starting or stopping, shifting, accelerating or braking.

### Maximum torque $T_{\text{KMax2}}$

Torques at a value of  $T_{\rm KMax2}$  do not occur in normal operation of a machine or plant, but can still be transferred by the flexible coupling without destroying it. Massive damage to the flexible coupling as well as damage to the screw connections may result, so that only emergency operation of the flexible coupling may be possible following the application of the  $T_{\rm KMax2}$  load. Torques at a value of  $T_{\rm KMax2}$  seldom occur, e.g. in cases of damage to the machine, emergency shut-down or abuse.

Following the occurrence of torques at a value of  $T_{\text{KMax2}}$  we generally recommend replacing the flexible coupling as well as screw connection parts.

### Permissible continously oscillating torque $T_{\mbox{\tiny KW}}$

The permissible continuously oscillating torque  $T_{\text{KW}}$  is the maximum permissible torque superimposed on the nominal torque. The specification of  $T_{\text{KW}}$  is given as

vibratory amplitude (peak value).

### Torsional stiffness $C_t$ and $C_{tdun}$

The torsional stiffness of the elastic coupling is specified as static and dynamic stiffness.

The static torsional stiffness  $C_t$  here applies to all static or semi-static processes and is determined by slowly twisting the elastic coupling (T=20°C).

The dynamic torsional stiffness  $C_{tdyn}$  applies to dynamic processes and is determined for a certain operating point. The boundary conditions of these operating point for the evaluated values are shown in SGF-TL-O01.

Outside this operating point the actual stiffness values of the elastic coupling may significantly deviate from the specified values!

### Maximum permissible speed $n_{max}$

The maximum permissible speed  $n_{\rm max}$  can be completely utilized continuously. The specified rpm value applies irrespective of the operating temperature as long as the indicated limit values for the operating temperature are complied with.

Refer to the operating and assembly instructions SGF-TL-002 (flexible couplings and flex coupling assemblies) for the operating temperature limits.

### Further applicable documents:

- » SGF-TL-001 Explanation of technical data
- » SGF-TL-003 Manual and Installation instruction for Link Assemblies and Link Couplings
- » Drawing and technical data sheets of Link Couplings





### **EXAMPLE FOR CUSTOMIZED SOLUTIONS**





















### Technical changes & technical data

We reserve the right to make technical changes in the course of further development. The technical data in the tables as well as on the drawings

and datasheets only serve to describe the product and are not to be understood as a guaranteed characteristic in legal terms. All illustrations are only provided as examples.

**Disclaimer**SGF makes every effort to always keep its offering up to date, substantially correct and complete. Nevertheless, the occurrence of errors cannot be completely ruled out.

SGF accepts no liability for the currency, substantial correctness or completeness of the information contained in this document, except when the errors have occurred due to intent or gross negligence. This concerns possible damages of a pecuniary or non-pecuniary nature suffered by third parties caused by the use of the products we offer.

Installation and commissioning of flexible couplings may be performed solely by qualified personnel. We expressly point out that this document can only provide support and that the customer has responsibility for the configuration and operational safety of the total system.

All content, such as text, images, graphics or videos, as well as their arrangement, are subject to copyright protection.

For additional information about the product range and special designs or services (vibratory behaviour of a total system calculations for screw connections, etc.), please contact:

Industry@sgf.com





# SGF LOCATIONS AND AGENCIES WORLDWIDE





+49 8638 605-588 Industry@sgf.com www.sgf.com